

The safety instructions and the user manual should be read through carefully before the product is used for the first time

# Safety Instruction

 Keep the instrument dry.
 Keep the instrument and battery out of reach of infant and child.

3. When the symbol " appears, the battery are low and should be charged.

#### Prohibited use

- Using the product without instruction
- Using outside the stated limits
   Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools
- (screwdrivers, etc.)
  Carrying out modification or conversion of the product
- Use of accessories from other manufacturers without express approval

#### 

Never attempt to repair the product yourself. In case of damage, contact a local dealer

#### Limits of use


Refer to section "Technical data".The device is designed for use in areas ently habitable by humans. Do not use the product in explosion hazardous areas or in aggressive


## Areas of responsibility Responsibilities of The Person In Charge of The Instrument:

- To understand the safety instructions on the product and
- Manuar.
  To be familiar with local safety regulations relating to accident
- prevention.


  Always prevent access to the product by unauthorised


# **Function** This digital tape has 2-in-1 solution combining a 16ft/5m traditional tape measure and real-time digital display for instant distance readings. **Product overview** Reference change/Unit Clear/Power of Buzzer Function/Me Charging port U JORGENSEN Tape lock 16ft/5m Power on/Measure Switch On/Off Long press "M/ON" button to switch on the device. Long press "C/OFF" to switch off the device Note: The device screen will go off if there is no operation in 2 minutes. The screen can be activated by pulling out the tape or pressing any key. It will power off if there is no operation in 5 minutes. PONY JORGENSEN

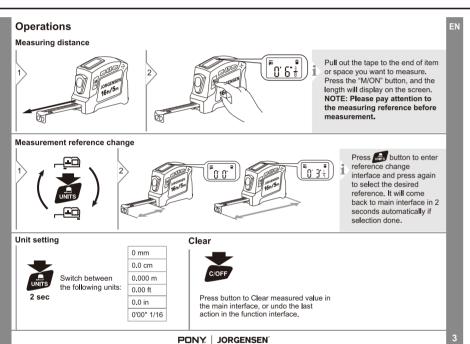

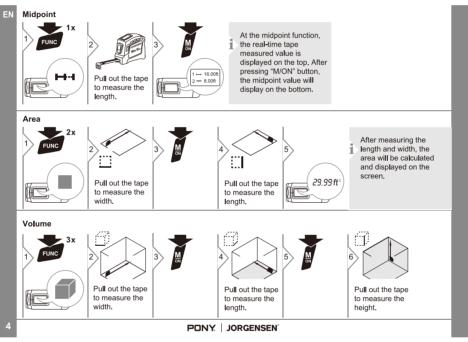

PONY. JORGENSEN

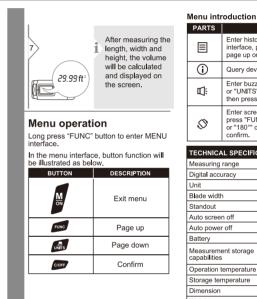

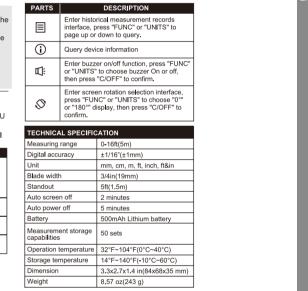

# Disposal

IMPORTANT: Read before Using

#### ∴ CAUTION

The batteries must not be disposed with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations. Dispose of the product appropriately in accordance with the national regulations in force in your country. Adhere to the national and country specific regulations



# Warranty

Two-Year Limited Warranty, This product is warranted to the original purchaser from the original purchase date for two years subject to the warranty coverage described herein. Please retain your receipt. This product is warranted to the original user to be free from defects in naterial and workmanship. If you believe that the product is defective at any time during the specified warranty period, please contact JORGENSEN customer service agent by sending email to customercare@ponyjorgensen.com. This warranty does not cover: (1) Part failure due to normal wear or product abuse: (2) Any parts have been altered or modified by anyone other than an authorized JORGENSEN personnel or failure to

install and operate equipment according to the guidelines put forth in the instruction manual. (3)Any products or parts used for rental purposes, damage resulting from shipping (claims must be filed with freighter), accident, abuse, act of God, misuse, or neglect.
JORGENSEN will replace or repair
the defective unit, at its option, subject to verification of the defect. Any implied warranties arising from the sale of a JORGENSEN product including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. JORGENSEN shall not be liable for loss of use of the product or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss. This warranty excludes any accessories. This warranty gives you specific legal rights, and you may also have other rights that vary from state

PONY | JORGENSEN Saddle Brook, NJ 07663 USA ponyjorgensen.com **f** 

PONY. JORGENSEN

PONY. JORGENSEN